
Programming Distinctive Ringing for the XTS and STSe

Distinctive Ringing for a Station

- At the phone you would like to change the ring on. With the handset in the cradle
 - Press **695**
 - **Your Ring Tones are 00-36**
 - **Enter the ring that you wish to hear 00-36.**
 - **When you hear the tone press “Speed” to save that tone your station.**
-